


WIRING THE *CLASSIC* OM-PnP ESC with Phoenix P8.

PLEASE NOTE. THE LIGHTING OUTPUTS ON THE OM-PnP ARE PRE-WIRED VIA THE PINS ON THE ESC.

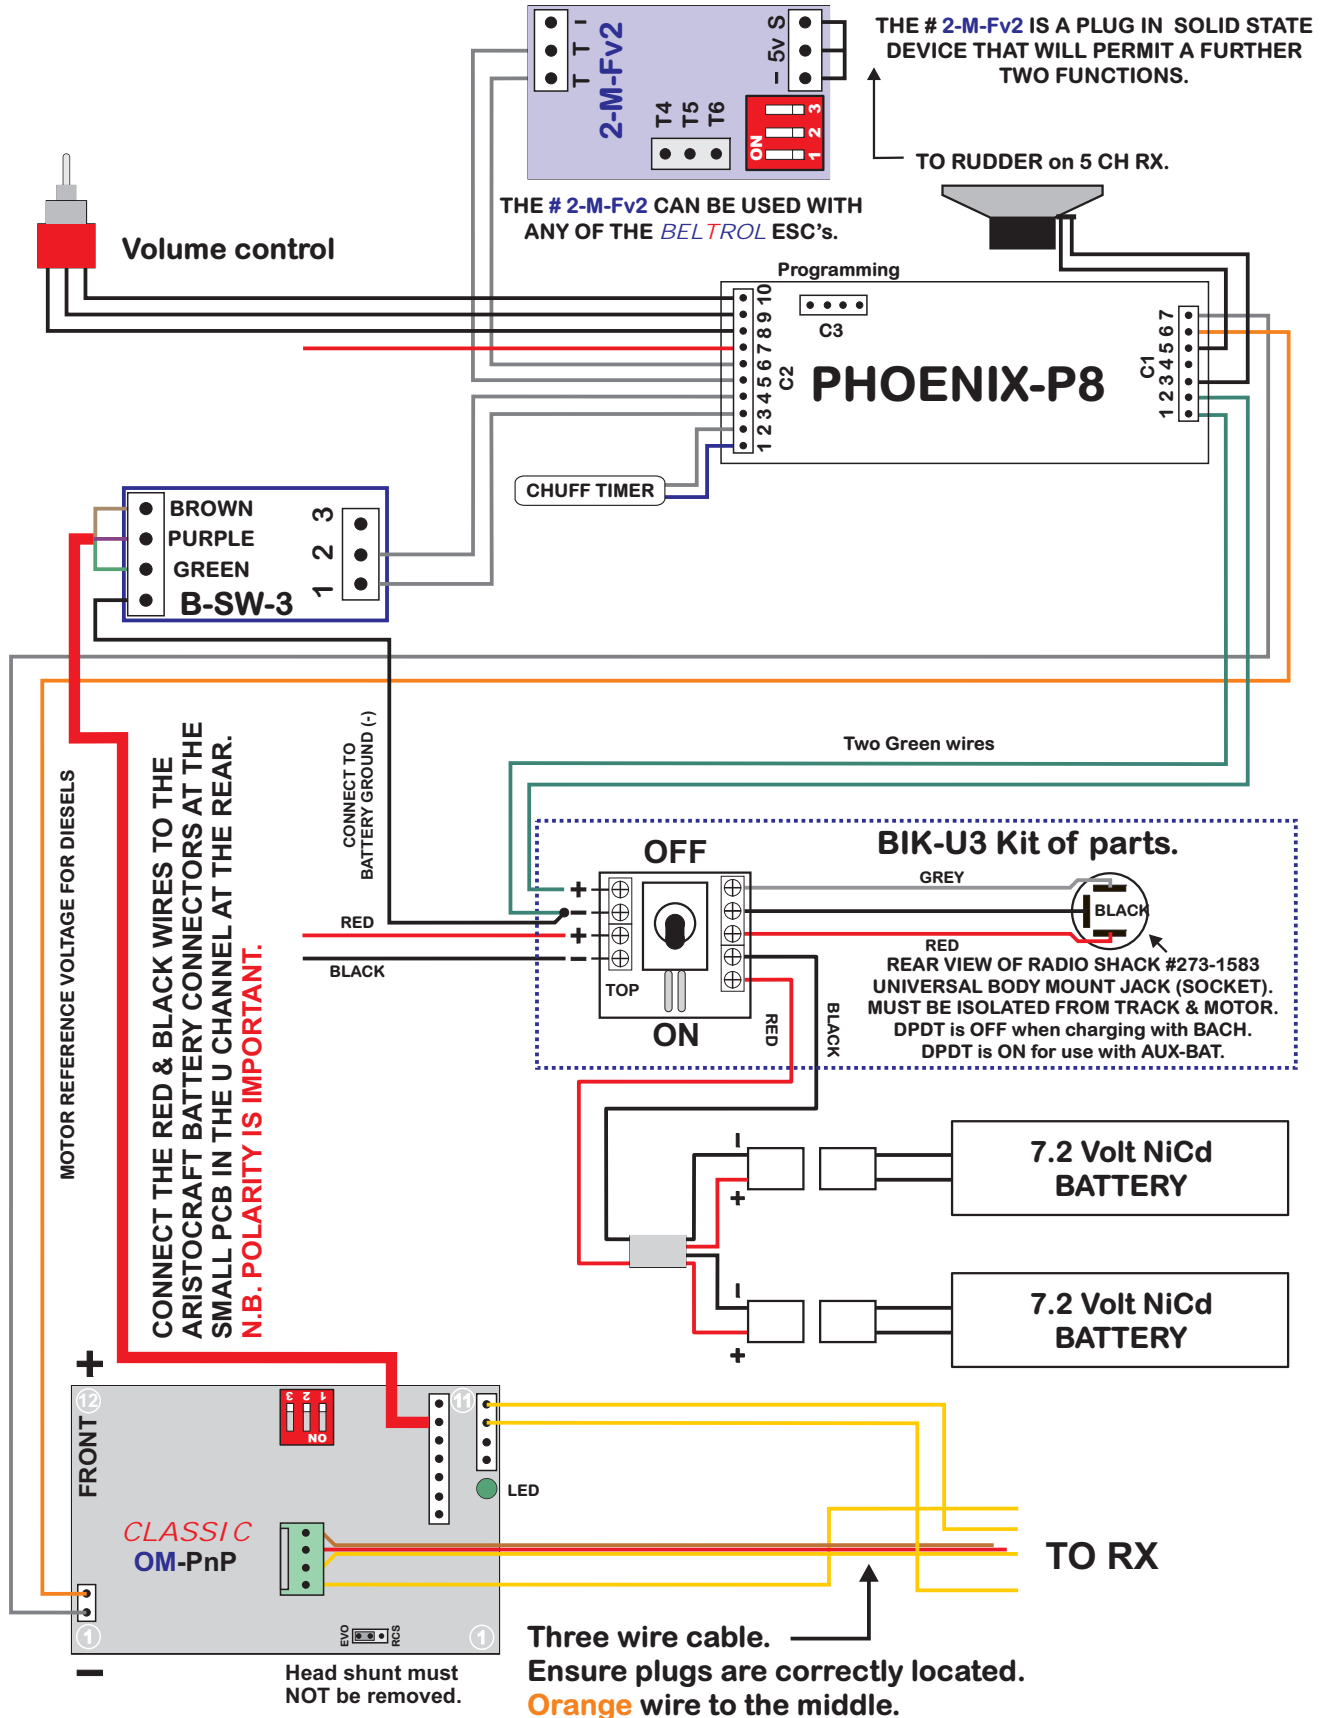


WIRING THE BELTROL OM-PnP ESC.

PLEASE NOTE. THE LIGHTING OUTPUTS & SOUND TRIGGERS ARE WIRED THE SAME WAY FOR ALL ESC'S EXCEPT THE PnP. THE LIGHTS ARE PRE-WIRED..

+ - F R 1 2 3

THE # 2-M-Fv2 IS A PLUG IN SOLID STATE DEVICE THAT WILL PERMIT A FURTHER TWO FUNCTIONS USING THE PHOENIX P5T INTERFACE.

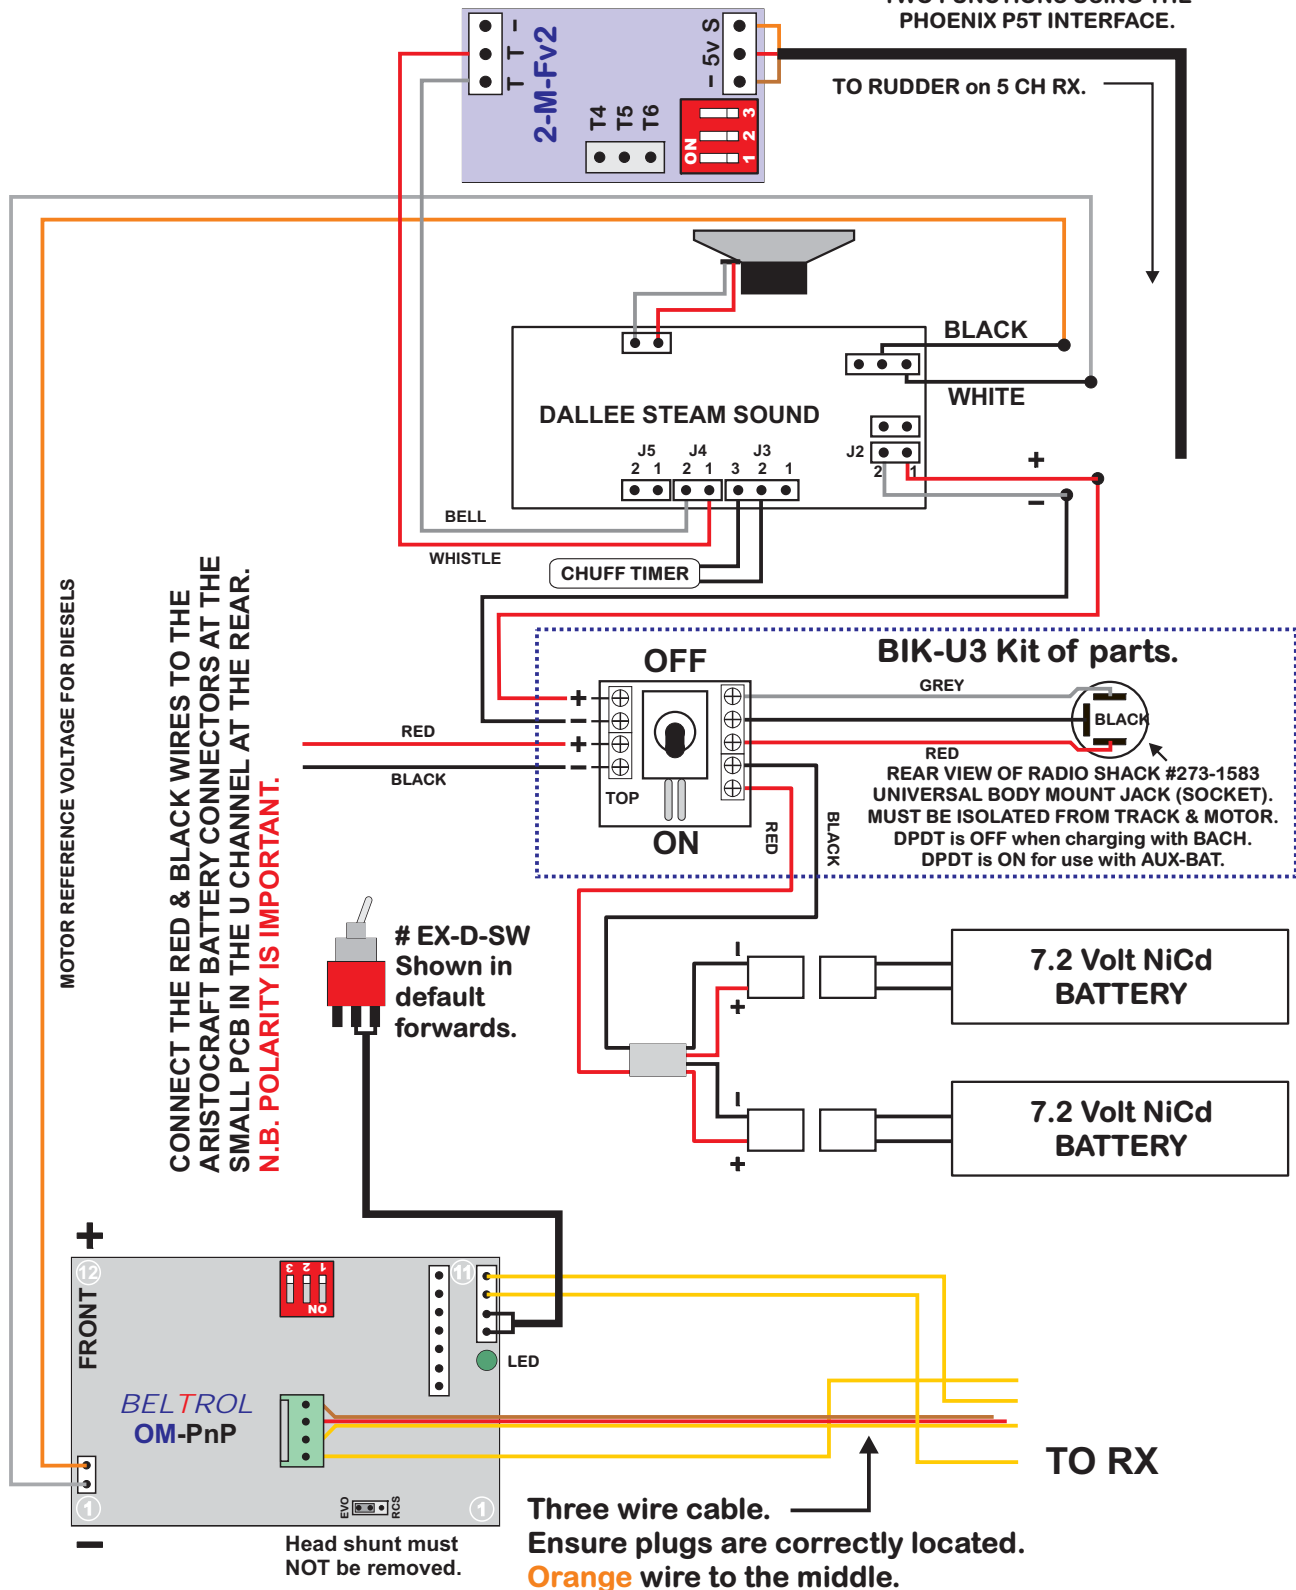

CONNECT THE RED & BLACK WIRES TO THE ARISTOCRAFT BATTERY CONNECTORS AT THE SMALL PCB IN THE U CHANNEL AT THE REAR. **N.B. POLARITY IS IMPORTANT.**

MOTOR REFERENCE VOLTAGE FOR DIESELS

EX-D-SW Shown in default forwards.

Head shunt must NOT be removed.

Three wire cable. Ensure plugs are correctly located. Orange wire to the middle.